



Kentronics  
1467 Bribie Island Road  
Ningi, Qld, 4511

ABN: 14 857 805 435

Ph: 07 5429 5363

Fax: 07 5429 5364

Mobile: 0417 377 480

Email: kenton@kentronics.com.au

## Resetting an Eclipse Head after loss of "K" Factor.

Press the "K" Button on the switch strip.  
Press the "P" Button on the switch strip.  
Press the "K" Button on the switch strip.

### Now set the CPL.

Hold in the "P" Button.  
Whilst holding in the "P" Button press the "U" button or the "D" button. (Up & Down buttons)

### Now set the "K" Factor.

Petrol K default is 6.500 but must be set around 2.500 for Low Flow or 5.000 for Hi Flow.

LPG K default is 11.000 & usually the far left hand "1" is not shown. LPG "K" is usually set around 10.000 (Looks like 0.000 on display)

To set the "K" factor

Hold in the "K" Button.  
Whilst holding in the "K" Button press the "D" button first & then the "U" button if required.