

The following shows the link positions for selectable T12-AC options.

Link Position		Function
JP49	B	Currently not used * (required position)
JP50	B	Currently not used * (required position)
JP51	B	Currently not used * (required position)
JP52	A	Australian preset display
	B	Hong Kong preset display
JP53	A	Real time display OFF
	B	Real time display ON
JP54	A	Calcopac/Electroline/LPG
	B	Highline/MPP/Electroline with ENVA/LPG
JP55	A	De-authorization timer selectable
	B	De-authorization timer set at 15 secs.
JP56	A	Without central price setting
	B	With central price setting
JP69 (JP64 REV A)	A	Normal operation
	B	MASTER RESET

**SET ICR NUMBER**

ICR numbers are set by the 4 position DIP switch on the ICR Processor PCB.

Ensure the ICR is set to #1. Refer to the following table for correct switch settings.

ICR No.	Switch No.			
	1	2	3	4
1	OFF	ON	ON	ON

OFF = OPEN