

FUNCTION TITLE BY FUNCTION NUMBER

- 1** *DISPLAY THE LAST FATAL ERROR*
- 2** *DISPLAY ERROR LOG*
- 3** *COMMUNICATION TEST*
- 4** *TEMPORARY STANDALONE*
- 5** *NOT IN USE*
- 6** *DOES NOT EXIST*
- 7** *DISPLAY TEST*
- 8** *SOFTWARE VERSION*
- 9** *NOT IN USE*
- 10** *ERASE SETUP / ERASE ERROR LOG*
- 11** *NOT IN USE*
- 12** *GRADE PRIORITY MAPPING*
- 13** *PRESET OPTIONS - DOLLARS OR LITRES*
- 14** *FLOAT SWITCH SETTING*
- 15** *NOZZLE FINALISATON*
- 16** *START UP DELAY*
- 17** *PRESET SHUTOFF TOLERANCE*
- 18** *VAPOUR RECOVERY*
- 19** *DOES NOT EXIST*
- 20** *SETTING THE PUMP NUMBER (FRONT)*
- 21** *SETTING THE PUMP NUMBER (REAR)*
- 22** *SETTING THE HOSES ACTIVE HOSE A1*
- 23** *SETTING THE HOSES ACTIVE HOSE B1*
- 24** *TEST DELIVERY SIDE A (FRONT) [HOSE 1]*
- 25** *TEST DELIVERY SIDE B (REAR) [HOSE 1]*
- 26** *READING ELECTRONIC TOTES (FRONT) [HOSE 1]*
- 27** *READING ELECTRONIC TOTES (REAR) [HOSE 1]*
- 28** *DOES NOT EXIST*
- 29** *SETTING ALLOCATION LIMITS STACK A*
- 30** *PUMP STACK TEST STACK A*
- 31** *SETTING PUMP PRICES STACK A*
- 32** *NOT IN USE*
- 33** *PRESET DELIVERY ALLOWED*
- 34** *DOES NOT EXIST*
- 35** *DOES NOT EXIST*
- 36** *NOT IN USE*
- 37** *VIEW UNCOMPENSATED DELIVERY VALUE (FDS FRONT)*
- 38** *VIEW UNCOMPENSATED DELIVERY VALUE (FDS REAR)*
- 39** *DOES NOT EXIST*
- 40** *DOES NOT EXIST*
- 41** *DOES NOT EXIST*

- 42 SETTING THE HOSES ACTIVE HOSE A2**
- 43 SETTING THE HOSES ACTIVE HOSE B2**
- 44 TEST DELIVERY SIDE A (FRONT) [HOSE 2]**
- 45 TEST DELIVERY SIDE B (REAR) [HOSE 2]**
- 46 READING ELECTRONIC TOTES HOSE A2**
- 47 READING ELECTRONIC TOTES HOSE B2**
- 48 DOES NOT EXIST**
- 49 SETTING ALLOCATION LIMITS STACK B**
- 50 PUMP STACK TEST STACK B**
- 51 SETTING PUMP PRICES STACK B**
- 52 NOT IN USE**
- 53 PRESET DELIVERY ALLOWED**
- 54 DOES NOT EXIST**
- 55 DOES NOT EXIST**
- 56 DOES NOT EXIST**
- 57 NOT IN USE**
- 58 NOT IN USE**
- 59 DOES NOT EXIST**
- 60 DOES NOT EXIST**
- 61 DOES NOT EXIST**
- 62 SETTING THE HOSES ACTIVE HOSE A3**
- 63 SETTING THE HOSES ACTIVE HOSE B3**
- 64 TEST DELIVERY SIDE A (FRONT) [HOSE 3]**
- 65 TEST DELIVERY SIDE B (REAR) [HOSE 3]**
- 66 READING ELECTRONIC TOTES HOSE A3**
- 67 READING ELECTRONIC TOTES HOSE B3**
- 68 DOES NOT EXIST**
- 69 SETTING ALLOCATION LIMITS STACK C**
- 70 PUMP STACK TEST STACK C**
- 71 SETTING PUMP PRICES STACK C**
- 72 NOT IN USE**
- 73 PRESET DELIVERY ALLOWED**
- 74 DOES NOT EXIST**
- 75 DOES NOT EXIST**
- 76 DOES NOT EXIST**
- 77 NOT IN USE**
- 78 NOT IN USE**
- 79 DOES NOT EXIST**
- 80 DOES NOT EXIST**
- 81 DOES NOT EXIST**
- 82 SETTING THE HOSES ACTIVE HOSE A4**
- 83 SETTING THE HOSES ACTIVE HOSE B4**

- 84 TEST DELIVERY SIDE A (FRONT) [HOSE 4]**
- 85 TEST DELIVERY SIDE B (REAR) [HOSE 4]**
- 86 READING ELECTRONIC TOTES HOSE A4**
- 87 READING ELECTRONIC TOTES HOSE B4**
- 88 DOES NOT EXIST**
- 89 SETTING ALLOCATION LIMITS STACK D**
- 90 PUMP STACK TEST STACK D**
- 91 SETTING PUMP PRICES STACK D**
- 92 NOT IN USE**
- 93 PRESET DELIVERY ALLOWED**
- 94 DOES NOT EXIST**
- 95 DOES NOT EXIST**
- 96 DOES NOT EXIST**
- 97 NOT IN USE**
- 98 NOT IN USE**
- 99 DOES NOT EXIST**
- 100 SET CRUSH-UP TIME (REMOVED IN 2.64g ONWARDS)**
- 101 SET OVER-SPEED TRIP (REMOVED IN 2.64g ONWARDS)**
- 102 VAPOUR ALARM**
- 103 DISPLAY PROBE TEMPERATURE**
- 104 DISPLAY LPG CORRECTION FACTOR**
- 105 DISPLAY LPG SPECIFIC GRAVITY**
- 106 REPORT THE LAST SIX PROBE ALARMS**
- 107 DISPLAY ENCODER CONSTANT**
- 108 SET VALVE START UP SWITCHING PROFILE**