


#### 4.4.1 Prepay Fuel Sales

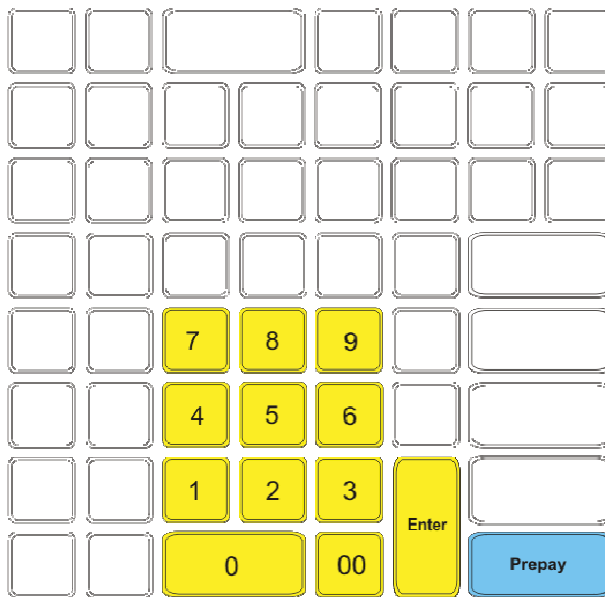


To authorise a prepay sale,

- 1) enter <pump number> on yellow keys
- 2) press the <Prepay> key and then
- 3) enter the dollar value (yellow keys)

Amounts between 1 and 99 dollars may be entered.

The pump will remain authorised with the specified prepay limit until fuel is taken. The icon sequence for a prepay transaction is shown.

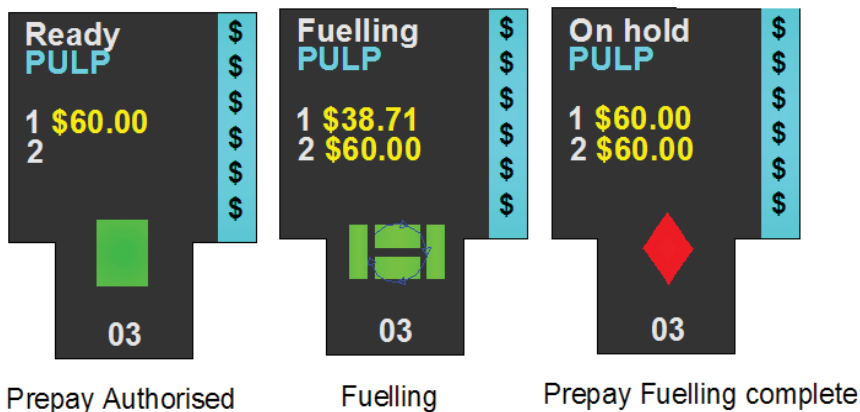

- To cancel a previous authorisation, repeat the process with a zero dollar amount.
- To change the prepay amount, repeat the process with the new dollar amount.