



Kentronics®
1467 Bribe Island Road
Ningi, Qld, 4511

ABN: 36 106 545 950

Ph: 07 5429 5363

Fax: 07 5429 5364

Mobile: 0417 377 480

Email: kenton@kentronics.com.au



Quality
ISO 9001



Issue Date 18/08/2015

How to install and configure a PEC 9000 Vertical LHS Display (92911)

NB:- The config mode replaces the old DIP Switch setting on the old CEEPEC displays.
If these setting are not configured, the displays will not function correctly.

- Install the 92911 Display in the bowser and re apply the 240VAC supply power.
- Enter the config mode by pressing and holding the “Fill” key on the Preset Keypad until “PIN?” appears in the Dollar LCD on the RHS Display.
- Enter the pin code 1, 2, 3, 9
- To Navigate the menus, use the 2 and 8 key to scroll through the different settings, and 4 & 6 to change the values

Every display will need to have the following setup :-

- Side (Front, Rear, Mimic)
- Config (Auto or User)
- Model (Dual, Trio, 1MPD, 2MPD, 3MPD, 4MPD)
- Totes (Show or Hide)
- 6 DIG (No or Yes)
- Mode (Native or Retro)
- Price (Cents or Dllrs)
- LPG (No or Yes)

Once you have configured all the settings, press “fill” to save and exit the config mode.