

FC6000 Pump Communication Connector Details

P1	Fuelquip (Email) Pumps	Data	Pumps connected here should be set to channel 1. Cannot be used in conjunction with PEC/Compac comms on channel 1
P2		Data	
P3		Shield	
P4	External Buzzer	Buzzer -	
P5		Buzzer +	
P6	PEC / Compac Pumps	Channel 2 - Black	Pumps connected here should be set to channel 2.
P7		Channel 2 + Red	
P8		Channel 1 – Black	Pumps connected here should be set to channel 1.
P9		Channel 1 + Red	
P10	Gilbarco Pumps	Gilbarco -	
P11		Gilbarco +	
P12	N/C		

PEC / Compac Processor Board Connector Pinout

