

SETTING THE PUMP/DISPENSER TYPE

- ☐ The front Main Display will be flashing the currently selected "Type" number.
 - If the "Type" number *does not* require changing, press the hash (#) button to advance to the setting of "Fuelling Position" numbers.
 - If the "Type" number *does* require changing, select the required "Type" from the following list.
 - 0 for 2, 3, or 4 product pumps/dispensers
 - 1 for 1 product, normal flow pumps/dispensers
 - 2 for 1 product, fast flow pumps/dispensers

After selecting the correct "Type", press the hash (#) button to initiate the change and advance to the setting of "Fuelling Position" numbers.

FUELLING POSITION NUMBERS

- ☐ On the front Main Transaction Display, the display digit second from the right on the Litres display will flash the *current* Fuelling Position number for the *front* of the pump/dispenser. Refer to Fig. 3.

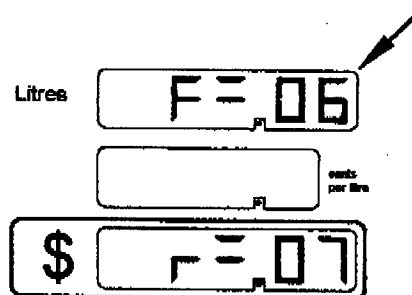


Fig. 3 - Fuelling Position Numbers - FRONT

- ☐ On the numeric keypad, enter the *required* Fuelling Position number (allowed range 01 to 16) for the front of the pump/dispenser. Always enter a zero as the first digit if the number is below 10, eg., for position 6, enter 06.

NOTE: If the number entered is outside the allowed range, the error message Er will be displayed. Entering the correct number will clear the error message.