 
 


T-24 CONSOLE - SYSTEM RECOVERY

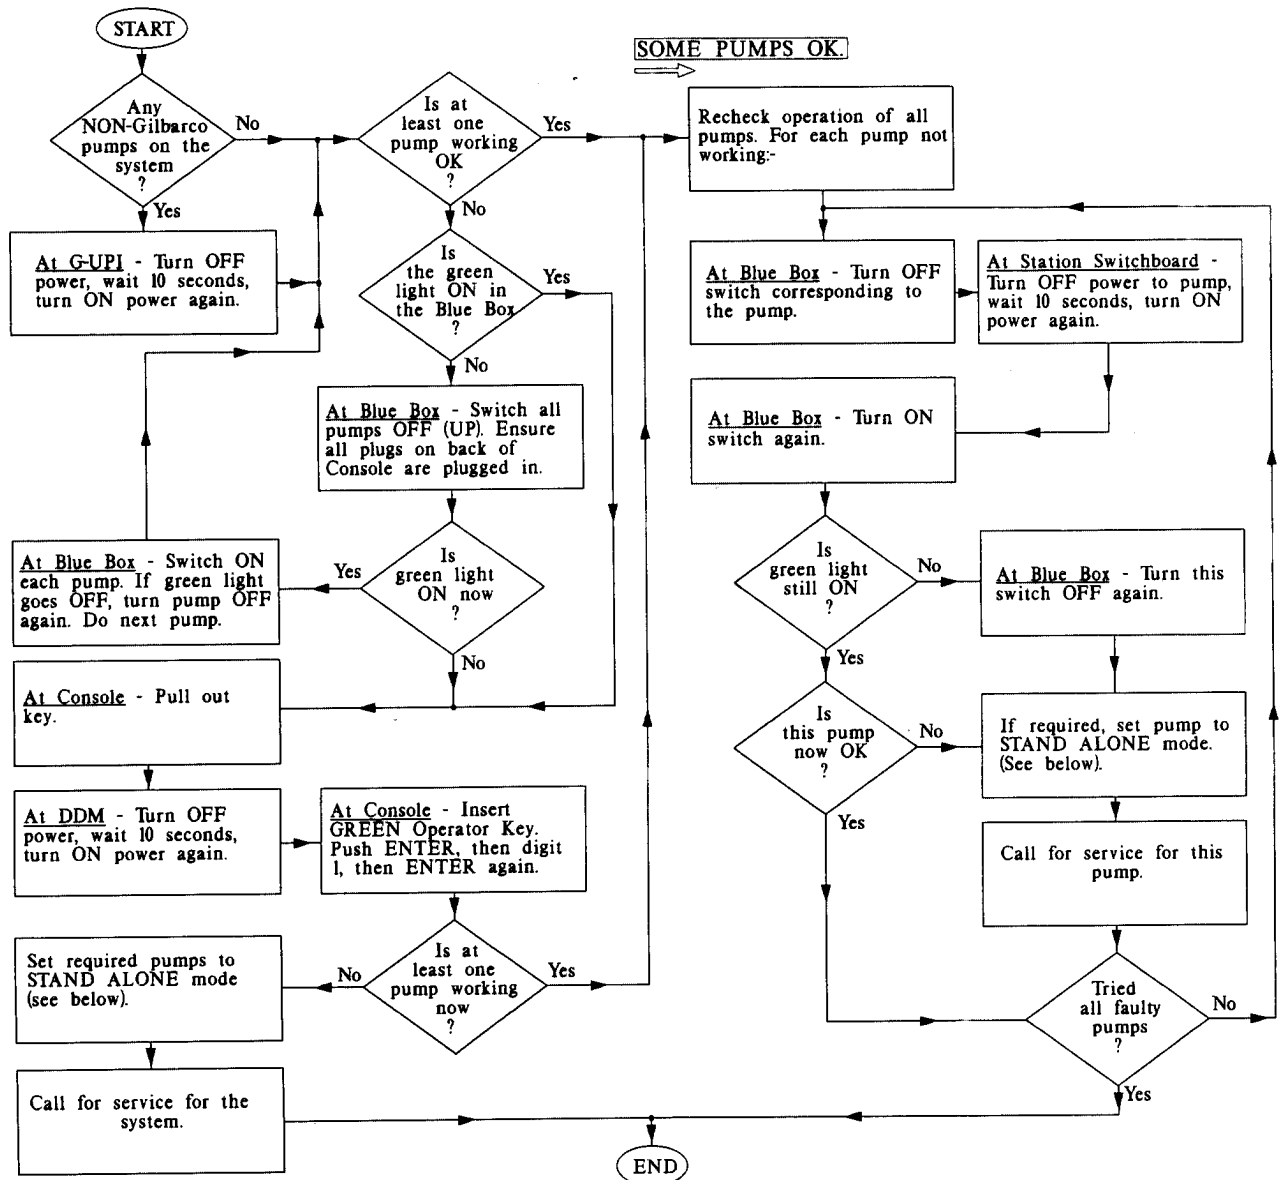

T-24 SYSTEM DIAGRAM

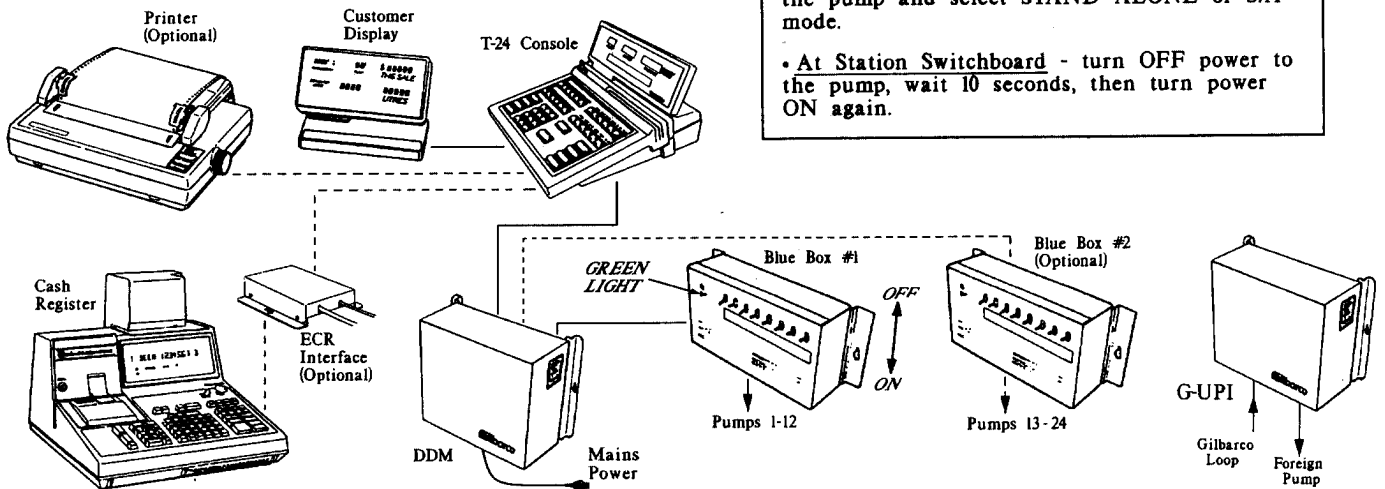

SETTING PUMPS TO STAND ALONE MODE.

- At Blue Box - ensure the corresponding pump switch is in the OFF (UP) position.
- At the Pump - gain access to the inside of the pump and select STAND ALONE or S/A mode.
- At Station Switchboard - turn OFF power to the pump, wait 10 seconds, then turn power ON again.

NOTE: A G-UPI (Gilbarco Universal Pump Interface) may be used instead of one or both Blue Boxes if non Gilbarco pumps are operating from the Console.

T-24 CONSOLE - OPERATOR QUICK REFERENCE CARD

01 NORMAL PUMP OPERATION

02 SHIFT TOTALS

SHIFT TOTALS: DISPLAY PRINT CHANGE

 
SHIFT CHANGE: CLOSING xxxx OPENING xxxx

PRINT SHIFT: CURRENT LAST BUFFERED

BUFFER SHIFT: xxxx xxxx xxxx xxxx

DISPLAY SHIFT: CURRENT LAST BUFFERED

BUFFER SHIFT: xxxx xxxx xxxx xxxx

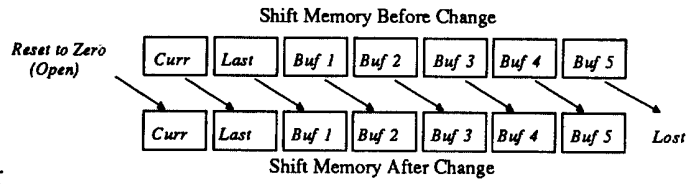

03 STATION TOTALS

STATION TOTALS: DISPLAY PRINT

PRINT STATION: CURRENT PREVIOUS

DISPLAY STATION: CURRENT PREVIOUS

 
04 PUMP TOTALS

PUMP TOTALS: DISPLAY PRINT

PRINT PUMP: CURRENT PERIOD TOTAL

PERIOD TOTAL: CURRENT LAST

DISPLAY PUMP: CURRENT PERIOD TOTAL

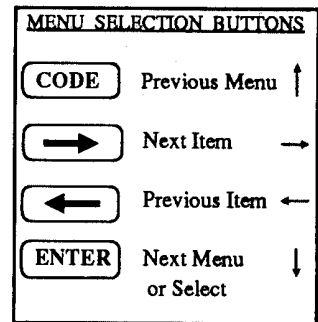

05 FUEL INVENTORY

INVENTORY: DELIVERY DISPLAY PRINT

DISPLAY INVENTORY: TANK GRADE

TANK 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15

06 PRICE CHANGE

ENTER PRICE CHANGE CODE xxxx

SELECT GRADE: xxxxxx

xxxxxx : PRICE IS : xxx.x C/L

07 PUMP MODE

 
SELECT PUMP BY PRESSING PUMP SELECT KEY

PUMP xx: SELF-SERVE MANUAL

08 PRINTER CONTROL

PRINTER QUEUE: STATUS LIST CANCEL

CANCEL PRINTER REPORTS: CURRENT ALL

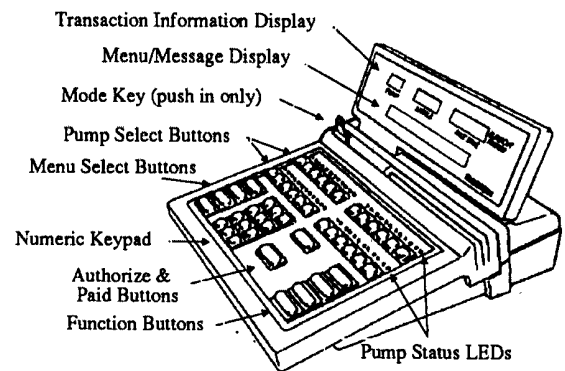

Status Flash Rates.

- Not on = pump idle.
- Fast Flash with Triple Beep = Call mode.
- On Steady = pump authorized & in use.
- Slow Flash with Single Beep = Collect mode.

T-24 CONSOLE - MANAGERS QUICK REFERENCE CARD

BLACK Mode Key

 
30 STATION TOTALS

STATION TOTALS: DISPLAY PRINT RESET

STATION CHANGE: CLOSING xxxx OPENING xxxx

PRINT STATION: CURRENT PREVIOUS

DISPLAY STATION: CURRENT PREVIOUS

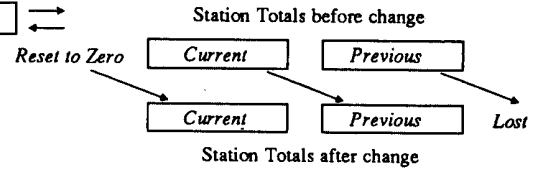

31 PUMP TOTALS

PUMP TOTALS: DISPLAY PRINT

PRINT TOTALS: CURRENT PERIOD TOTAL

PERIOD TOTAL: CURRENT LAST

DISPLAY TOTALS: CURRENT PERIOD TOTAL

32 FUEL INVENTORY

INVENTORY: DELIVERY DISPLAY PRINT RESET

TANK 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15

DISPLAY INVENTORY: TANK GRADE

TANK 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15

33 PRICE CHANGE

FUEL PRICE: CHANGE PRICE_VOLUME TOTAL

PRICE_VOLUME TOTAL: DISPLAY PRINT RESET

RESET CURRENT PRICE_VOLUME: NO / YES

SELECT GRADE: xxxxxx

SELECT GRADE: xxxxxx

xxxxxx: PRICE IS: xxx.x C/L

34 GRAND TOTALS

GRAND TOTALS: DISPLAY PRINT

35 CONSOLE SETUP

SETUP: ALLOCATION CODES AUTH-OPTS PRINT

AUTH-OPTIONS: GEN AUTH BUFFER PAYMENT

BUFFER PAYMENT: ON OFF

GENERAL AUTHORIZATION: ON OFF

CODES: PRICE CHANGE MODE

ACCESS MODE CODE: xxxxx

PRICE CHANGE CODE # x : xxxxx

SITE ALLOCATION: \$xx.00



 
12-38 Talavera Road
North Ryde NSW 2113
Tel: 888 4888
Fax: 887 3854

Townsville Brisbane Sydney Melbourne Hobart Adelaide Perth Darwin


T-24 CONSOLE - PROGRAMMING QUICK REFERENCE GUIDE

BLUE Mode Key


50 CONSOLE CONFIGURATION

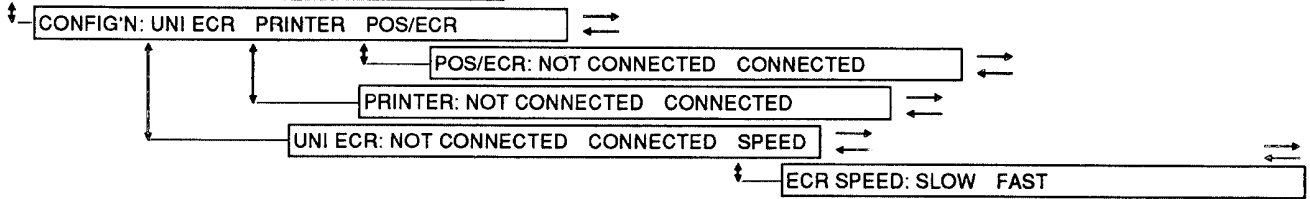


51 SITE IDENTITY

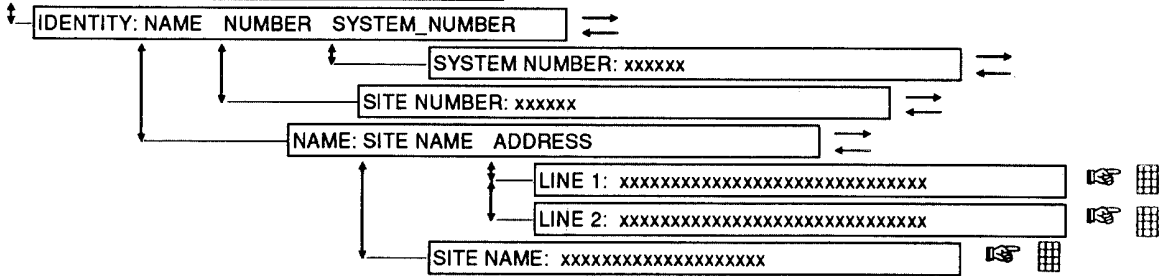 


52 GRADE PROGRAMMING

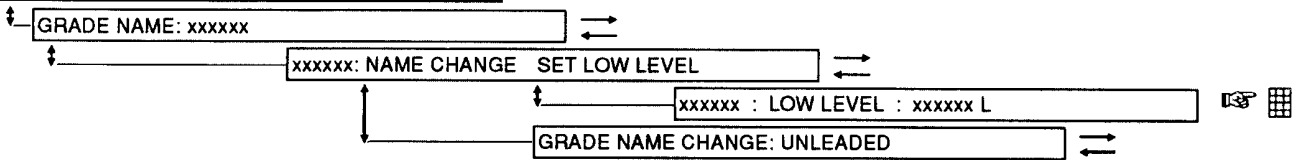 


53 FORECOURT CONFIGURATION

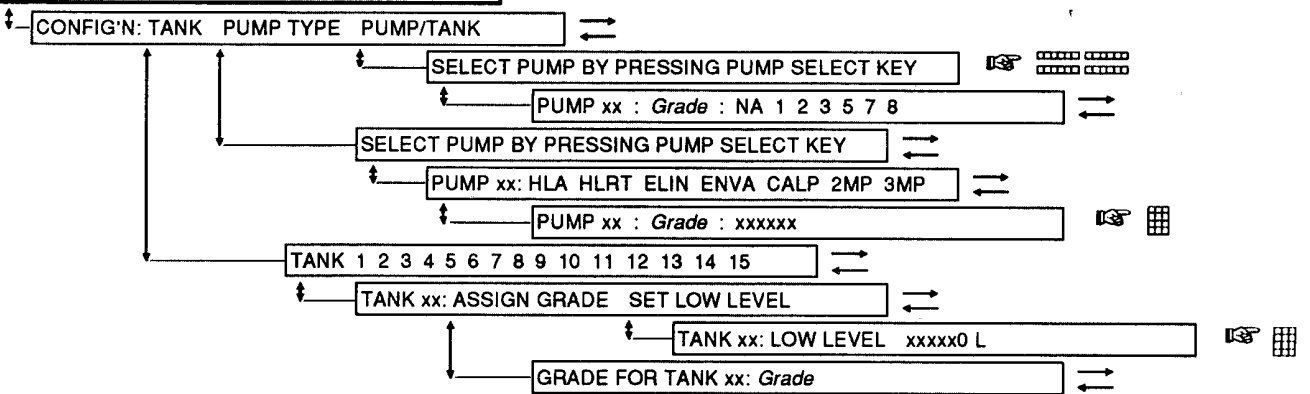 

54 PUMP TOTAL INITIALISATION

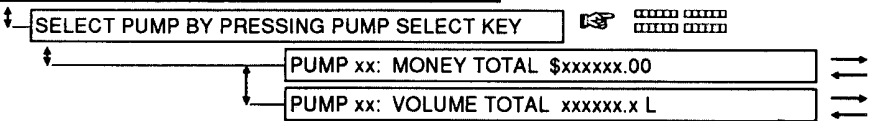 

55 SET TIMINGS

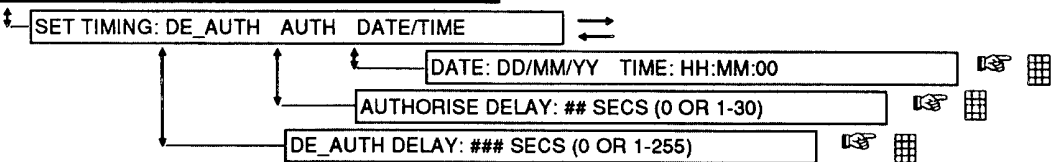 

56 MASTER RESET

