9000 Series (MULTIPEC2) Virtual DIP Switch Settings

- Hold down the FILL key for 3 seconds until PIN? is displayed in the 'Litres' window;
- Press 1 , 2 , 3 , 9;
- The 'Litres' window will show SIDE, which is the first virtual dip switch option;
- When changing or viewing the virtual dip switch settings, the 2 , 4 , 6 & 8 keys function as cursor keys. Use the 2 & 8 to scroll through the next/previous virtual dip switches and the 4 & 6 to scroll through the setting options.



- Changes made to the virtual dip switch settings are 'memorised' until saved. To save the changes and exit the virtual dip switch setting routine, press FILL. To exit without saving changes, press CLEAR.

Switch	Options	Default
SIDE	FRONT (power supply side) REAR (processor side)	FRONT
MODEL	1MPD 2MPD 3MPD DUAL TRIO 1MPS (not available in v1.3f)	3MPD
TOTES	SHOW HIDE	SHOW
DMODE *Not available with 1.3f dispaly software	5 DIG L 5 DIG R 6 DIG	5 DIG L
IP Bd	NO YES	NO
PRICE	CENTS DLLRS	CENTS
LPG *Not available with 1.3f display software	NO YES	NO

NOTE - The IP Bd, LPG and PRICE options are only available on FRONT side

Virtual Dip Switch Options (Display Software v1.5b and v1.3f)

9000 SERIES VIRTUAL DIP SETTINGS

Local Display Configuration Mode

CLEAR 1 2 3

FILL 4 5 6

$20 0 7 8 9

Use 2 and 8 keys to scroll through menu items, and 4 and 6 keys to view options for each item

When finished, press FILL key to save changes or CLEAR to quit without saving

SHADED *Shaded options are display software defaults*

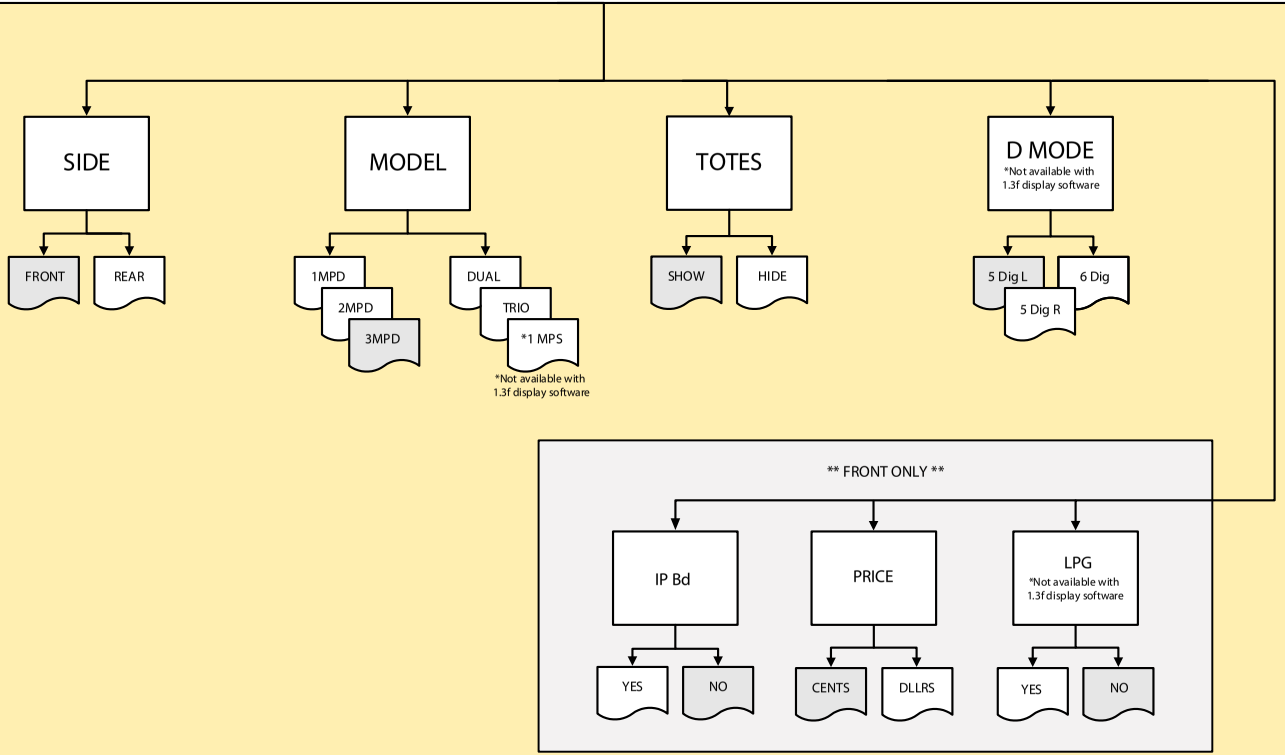

9000 Series (MULTIPEC2) Virtual DIP Switch Settings

- Hold down the FILL key for 3 seconds until PIN? is displayed in the 'Litres' window;
- Press 1 , 2 , 3 , 9 ;
- The 'Litres' window will show SIDE, which is the first virtual dip switch option;
- When changing or viewing the virtual dip switch settings, the 2 , 4 , 6 & 8 keys function as cursor keys. Use the 2 & 8 to scroll through the next/previous virtual dip switches and the 4 & 6 to scroll through the setting options.



- Changes made to the virtual dip switch settings are 'memorised' until saved. To save the changes and exit the virtual dip switch setting routine, press FILL. To exit without saving changes, press CLEAR.

Switch	Options	Default
SIDE	FRONT (power supply side) REAR (processor side)	FRONT
CONFIG	AUTO USER	AUTO
MODEL	1MPD 2MPD 3MPD 4MPD DUAL TRIO	3MPD
TOTES	SHOW HIDE	SHOW
6 DIG	NO YES	NO
MODE	NATIVE RETRO	NATIVE
PRICE	CENTS DLLRS	CENTS
LPG	NO YES	NO

NOTE - The PRICE and LPG options are only available on the FRONT side

Virtual Dip Switch Options (Display Software r2.31 - 2.36)

9000 SERIES VIRTUAL DIP SETTINGS

Local Display Configuration Mode

Use [2] and [8] keys to scroll through menu items, and [4] and [6] keys to view options for each item

[CLEAR] [1] [2] [3]

[FILL] [4] [5] [6]

[$20] [0] [7] [8] [9]

When finished, press [FILL] key to save changes or [CLEAR] to quit without saving

SHADED *Shaded options are display software defaults*

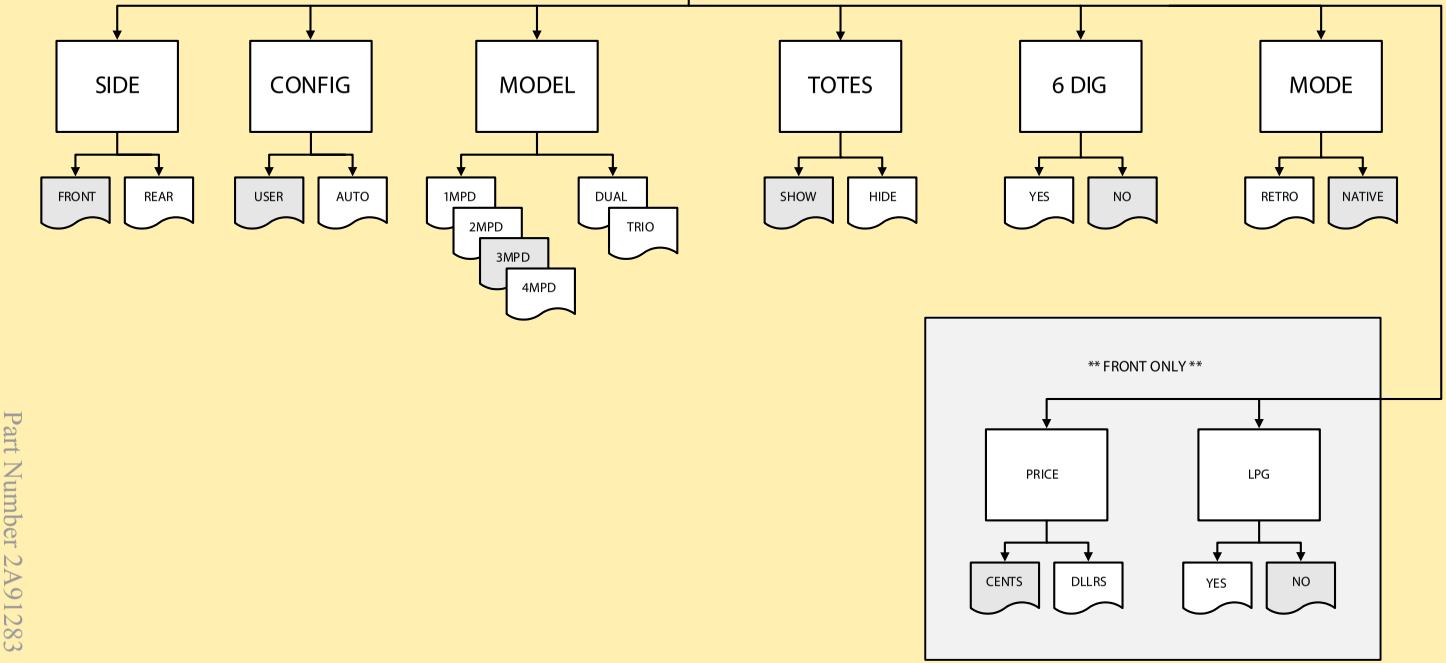

Part Number 2A91283
Insert Card FandE 2.64 Issue 02 25-09-12